


DRIVEWAY PAVER APPLICATION

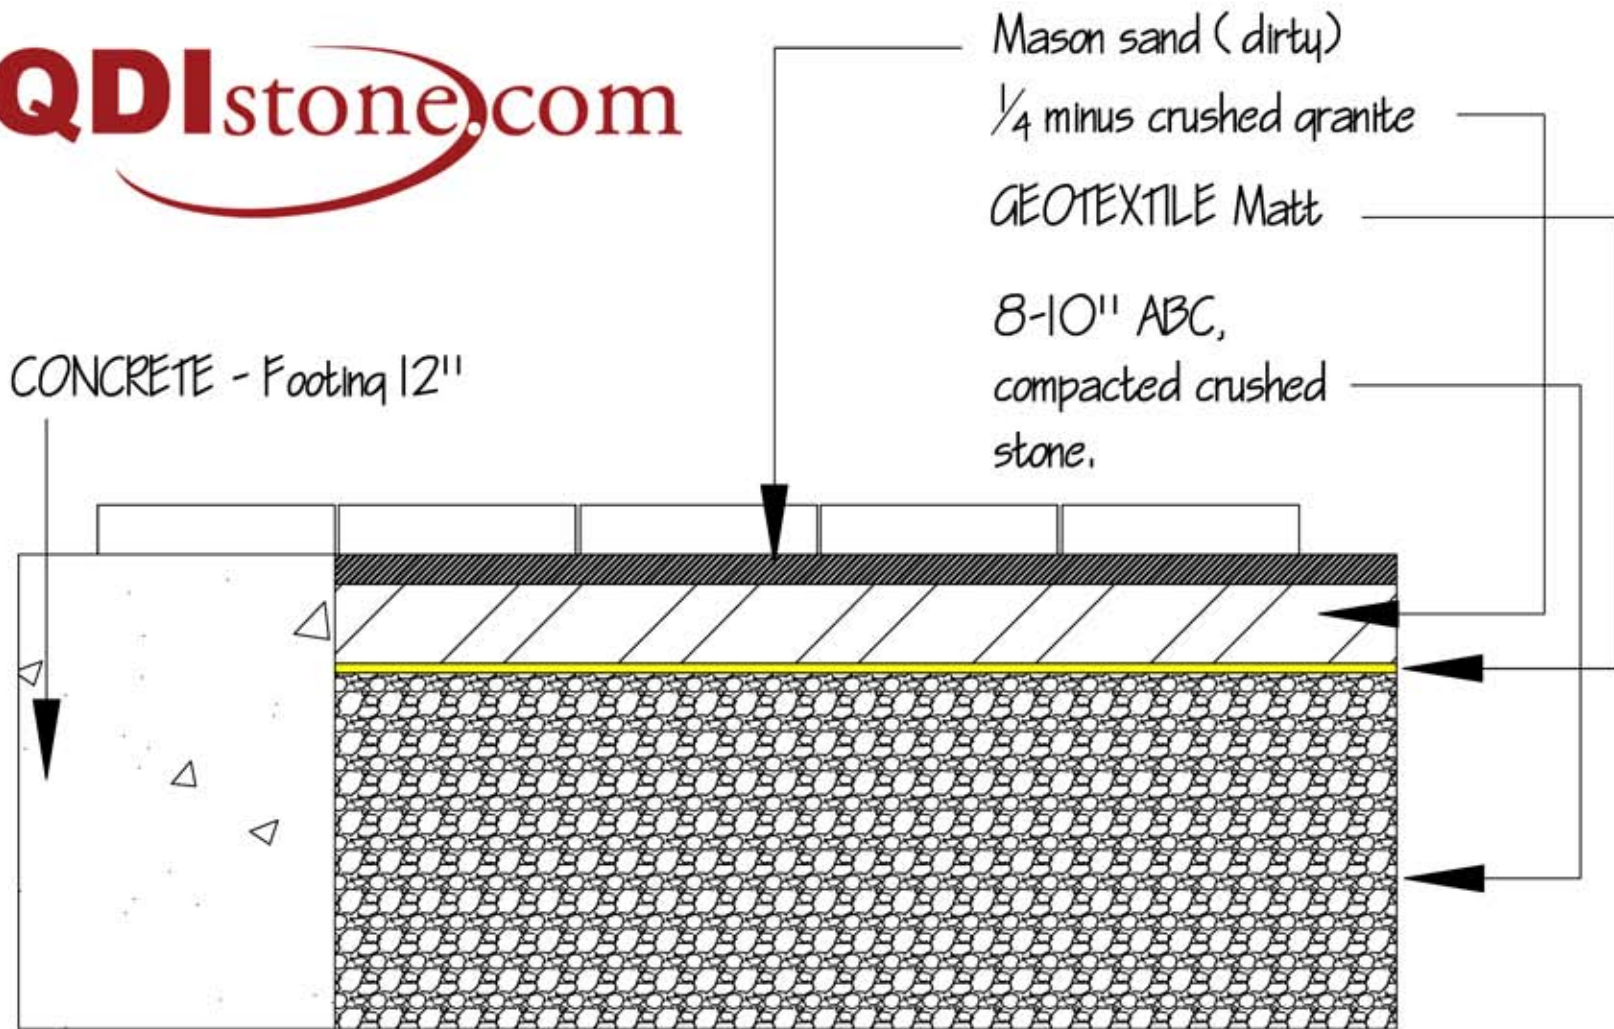

CONCRETE FOOTER at perimeter area to prevent lateral movement. 12" depth by 8" avg.

MASON SAND (dirty) 1"+ compacted prior to application of paving stones.

1/4 MINUS GRANITE 2" compacted prior to Mason sand application.

GEOTEXTILE - Erosion control. Geotextile is used as a separating (filtering) layer between soil and fill materials (sand, gravel chippings, etc). Areas where soil migration is minimum, GEOTEXTILE may be eliminated.

ABC - Crushed stone aggregate 8"+. ABC will provide adequate drainage for storm and water run-off.

For more information, contact the ASLA, or your local building code provider.